

UPDATING FIRMWARE INSTRUCTIONS

- 1. You must have the Lockview Software installed and operational on a computer to accomplish this.
- 2. You must have the firmware file on the same computer in a known location (know where you downloaded or save it to).
- 3. The Setup Code will be required for each cart you are uploading firmware on. This can be found on the Controller (Black Box) located in the right hand innerwall. It is an 8 digit code on a GEEN Sticker it will be labeled as Setup CD Code.
 - » You will need to remove the drawers to access it.
 - » It is easiest to take a picture of the Green Sticker on the module. Then you will have it when you need it.



Perform the following steps prior to going onsite and connecting to each of the carts. Double Click the Lockview Icon to start the program.

STEP 1 – Login to Lockview5 Software (Operator Name & Password- "admin")



STEP 2 – from Main Menu select Window and then More Windows from Drop-Down Menu

Be (ten		×
		pare e a
		DIT
Rep: Myres Look		OM JUNTE A
	a complex comp	om
	ok Compk	on
<u> </u>	ox compx	om
	a compa	on
Nexos.	a compa	om
	x compx comp	OM
_	ok Compk	om
Database DK Admin	n comne comme comme comme comme comme comme comme co I	19 49



Planas and	or the window code:				
(I) Trease en	er trie window code.		OK Cancel		
fwmgr					
(omp <	C	omo:<		
Vilian 55,2 Per Clark					
Stee 3327e Chert New Visclar Hig	Compx Compx	Com x	om x Com x	Con x	
None 3.23 The Card				CompK (mpK Comp CompK (
New York Carlos					
Mar the last of an analysis of a second seco	Anter Composition and the Composition of the Compos				
Mare table oper					
Mar U.S. Harris C. H. Harris C.					

STEP 3 – Enter 'fwmgr'' in the screen below and then select OK

STEP 4 – select Browse and locate and select the firmware to upload and then select "Commit the Update Option"

Firmware	Manager)
C	FirmwareType: 0150	_			
Current Sta	US	1 2010)		المعانية والمعالم	
Most recent	Inniware in use. Metro 1.000760 (Sep 11	2013)	_	Activated	
Firmware Fi	e Selection				
Firmware	File Name:		_		
			Bro	wse	
Firmwan	Date: Typ	e:			
Lock Unde	e Ontions				
cook opua					
C	HALI lock updates to selected firmware	э.			
(•	ALL locks will be updated with the firmw	lare selected at	ove.		
	Commit the Update	Fxit	1		
	Option				



.

•

UPDATING FIRMWARE INSTRUCTIONS

srv-live-build_5391(1).cxf 🚔 Select Firmware File... ↑ 🕹 > This PC > Downloads Search Downloads Q 5 V New folder HEE -0 Organize 🔻 ~ Documents Date ~ * Name Type Size Pictures * 3/26/2018 10:23 AM Agent_Call_Summary_Report-Agent Call S... File folder Wawa * cipc-Admin-fmr.8-6-3-0 5/17/2017 8:47 AM File folder Debbie.Chlan DRIVERS 2/7/2020 1:38 PM File folder ÷ HP Downloads 5/17/2017 12:36 PM File folder Daily LV552_CompX 6/21/2019 2:49 PM File folder Flex LV552_CompX (1) 9/4/2019 10:02 AM File folder joseph.hamrick Local Disk (C) - Shortcut 8/28/2018 3:17 PM Shortcut NEW_COMPX nugent_0780 (1).cxf 10/11/2019 11:02 AM **CXF** File 17 nugent_0780 (2).cxf 11/30/2020 12:27 PM CXF File 17 OneDrive nugent_0780.cxf 10/10/2019 4:04 PM CXF File 17 This PC oem7_working_version_4018 (1).cxf 10/11/2019 11:03 AM CXF File 3D Objects oem7_working_version_4018.cxf 10/10/2019 4:04 PM 17 **CXF** File oem7_working_version_4503.cxf Desktop 17 5/28/2020 7:44 AM CXF File srv-live-build_4392.cxf Documents 9/4/2019 11:50 AM CXF File 25 srv-live-build_4428 (1).cxf 10/11/2019 11:03 AM CXF File 25 ¥ Downloads < > srv-live-build_5391(1).cxf ~ File name: Firmware Files (*.cxf) Open Cancel

mware File	Selection			
Timware	lie ridine.			Browse
Firmware	Date:		Type:	
ck Update	Options			
с	HALT lock updates	s to selected fir	nware.	
œ	ALL locks will be up	pdated with the	firmware selecte	ed above.
· · · · · · · · · · · · · · · · · · ·				



.



STEP 5 – The following message will appear- selete "ok"



UPDATING FIRMWARE ON CART

- **STEP 1 –** Login to Lockview5 Software
- **STEP 2** Place the electronic lock into SETUP mode if the Lock is <u>not</u> in the database go to Step 3:
 - 1. Press LOCK/CLEAR for 3 Seconds.
 - 2. Enter the 8 digit setup code (Setup Cd), assigned to the electronic lock and press ENTER. (See green sticker set for setup code.)

NOTE: Each electronic lock has a unique setup code .

- **STEP 3 –** connect cable from USB port on cart to laptop
- **STEP 4** software will automatically load current firmware onto cart and once complete "In Sync" will appear in bottom left corner on screen.



STEP 5 – *disconnect cable*

STEP 6 – Exit Lockview

STEP 7 – Press LOCK/CLEAR on cart T-Pad to exit setup mode.

Verify Correct Operation of the cart by unlocking and locking several times.

If you run into any issues perform a servo calibration. To perform at the keypad hit 1350 ENTER then 1 and 5 together for 1 second and release them. The servo motor should run through a self calibration it should take approx. 30 seconds and if successful a 3 note tune will play. If it is unsuccessful a 7 note tune will play.





* Save this document for future application, load rating and/or safety reference.

© 2022 InterMetro Industries Corporation, Wilkes-Barre, PA 18705 INSTR-FIRMWARE REV 11/22

an Ali Group Company



MODE D'EMPLOI



INSTRUCTIONS DE MISE À JOUR DU MICROLOGICIEL

- 1. Vous devez avoir le logiciel Lockview installé et opérationnel sur un ordinateur pour accomplir ceci.
- 2. Vous devez avoir le fichier du micrologiciel sur le même ordinateur dans un emplacement connu (savoir où vous l'avez téléchargé ou enregistré).
- 3. Le code de configuration sera requis pour chaque chariot sur lequel vous téléchargez le micrologiciel. Ceci peut se trouve sur le contrôleur (boîte noire) situé dans la paroi intérieure droite. Il s'agit d'un code à 8 chiffres sur un autocollant GEEN, il sera étiqueté comme code du CD d'installation.
 - » Vous devrez retirer les tiroirs pour y accéder.
 - » Le plus simple est de prendre en photo l'autocollant vert présent sur le module. Vous l'aurez alors quand vous en aurez besoin.



INSTRUCTIONS DE MISE À JOUR DU MICROLOGICIEL

Effectuez les étapes suivantes avant de vous rendre sur place et de vous connecter à chacun des chariots.

Double-cliquez sur l'icône Lockview pour démarrer le programme.

ÉTAPE 1 - Connectez-vous au logiciel Lockview5 (nom de l'opérateur et mot de passe - « admin »)

LockView 5	
E LockView - Login	×
Log in to. Locitions	
Operator Name: admin Password: *****	_
OK Cancel	

ÉTAPE 2 - dans le menu principal, sélectionnez Fenêtre, puis Plus de fenêtres dans le menu déroulant



٠



A Mara Mindauer	A MARKAGE AND A MA	TO PERSON AND A PERSON AND A	and the	
Iviore windows				
Please enter the	window code:	OK		
fwmgr	mo	Comi		
(SJ Per Chert	1 1 18-24-08	2 11111		-
and and and a second se	mox Comox Co	Com	Como	Como
	Comot Comot mix Comot Comot Comot Comot Comot Comot Comot Comot	Comok Comok mok Comok mok Comok comok Comok Comok Comok	Compt Com Compt Compt Compt Com Compt Com Compt Com	
			CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX CompX	nox Comox Comox Comox Comox Comox Comox Comox Comox Comox Comox Comox Comox Comox

ÉTAPE 4 – sélectionnez Parcourir, localisez et sélectionnez le micrologiciel à télécharger, puis sélectionnez

	Firmware Type: 0150		
Most recent	firmware in use: Metro 1.000780 (Sep 11 2019)		Activated
Firmware Fi	le Selection		
Firmware	File Name:	-	
			rowse
Firmwar	e Date: Type:		
, 			
Lock Upda	te Options		
0	HALI lock updates to selected firmware.		
œ	ALL locks will be updated with the firmware selected	d above.	

"Valider l'option de mise à jour"

.



INSTRUCTIONS DE MISE À JOUR DU MICROLOGICIEL

→ 🕐 🛧 🔶 > This PC → [Downloads		ٽ ~	Search Downloads	,
ganize 🔻 New folder					
Documents	* ^	Name	Date	Туре	Size
E Pictures	1	Agent Call Summary Report-Agent Call S	3/26/2018 10:23 AM	File folder	
Wawa	*	cipc-Admin-fmr.8-6-3-0	5/17/2017 8:47 AM	File folder	
Debbie.Chlan	*	DRIVERS	2/7/2020 1:38 PM	File folder	
Daily		HP Downloads	5/17/2017 12:36 PM	File folder	
Elev		LV552 CompX	6/21/2019 2:49 PM	File folder	
Flex		LV552 CompX (1)	9/4/2019 10:02 AM	File folder	
joseph.hamrick		Local Disk (C) - Shortcut	8/28/2018 3:17 PM	Shortcut	
NEW_COMPX		nugent_0780 (1).cxf	10/11/2019 11:02 AM	CXF File	
OneDrive		nugent_0780 (2).cxf	11/30/2020 12:27 PM	CXF File	
		nugent_0780.cxf	10/10/2019 4:04 PM	CXF File	
This PC		oem7_working_version_4018 (1).cxf	10/11/2019 11:03 AM	CXF File	
3D Objects		oem7_working_version_4018.cxf	10/10/2019 4:04 PM	CXF File	
Desktop		oem7_working_version_4503.cxf	5/28/2020 7:44 AM	CXF File	
Documents		srv-live-build_4392.cxf	9/4/2019 11:50 AM	CXF File	
Downloads		srv-live-build_4428 (1).cxf	10/11/2019 11:03 AM	CXF File	
	~	<	~		
File name	sny-live-build	5391(1) of		Firmware Files (*.cxf)	

st recent firmware in use: Metro 1.000780 (Sep 11 2019) mware File Selection Firmware File Name: Firmware Date: Type:	Activate
mware File Selection Firmware File Name: Firmware Date: Type:	Browse
Firmware File Name: Firmware Date: Type:	Browse
Firmware Date: Type:	
ock Update Options	
 HALT lock updates to selected firmware. 	
ALL locks will be updated with the firmware select	cted above.



.

ÉTAPE 5 – Le message suivant apparaîtra : sélectionnez « ok »

Firmware N	lanager		-		\times
	FirmwareType: 0150	•			
Current Status					
Most recent fim	nware in use: Metro 1.000780 (Sep 11 2	(019)		Activated	d
Firmware File S	Selection				
Firmware Fi	le Name:				
C:\Users\da	ve.moyer\Downloads\nugent_0780.cxf		Bro	Wse	
Comment D					
Firmware D	ate: Type:				
Firmware	Jate: Type: Upload Successful			>	<
	late: Type: Upload Successful Firmware has been uploaded; locks w check in.	vill be upgr	aded as	> s they OK	
	late: Type: Upload Successful Firmware has been uploaded; locks w check in.	vill be upgr	aded as	> s they OK	<
	late: Type: Upload Successful Firmware has been uploaded; locks w check in.	vill be upgr	aded as	> s they OK	<
	late: Type: Upload Successful Firmware has been uploaded; locks w check in.	vill be upgr	aded as	> s they OK	



INSTRUCTIONS DE MISE À JOUR DU MICROLOGICIEL

MISE À JOUR DU FIRMWARE SUR LE PANIER

- ÉTAPE 1 Connectez-vous au logiciel Lockview5
- ÉTAPE 2 Placez la serrure électronique en mode CONFIGURATION si la serrure n'est pas dans la base de données

passez à l'étape 3 :

- 1. Appuyez sur LOCK/CLEAR pendant 3 secondes.
- 2. Entrez le code de configuration à 8 chiffres (Setup Cd) attribué à la serrure électronique et appuyez sur Entrée. (Voir le jeu d'autocollants verts pour le code de configuration.)

REMARQUE : Chaque serrure électronique possède un code de configuration unique.

- ÉTAPE 3 connectez le câble du port USB du chariot à l'ordinateur portable
- ÉTAPE 4 le logiciel chargera automatiquement le micrologiciel actuel sur le chariot et une fois terminé "In Sync" apparaîtra dans le coin inférieur gauche de l'écran.



ÉTAPE 5 – déconnecter le câble

ÉTAPE 6 – Quitter Lockview

ÉTAPE 7 – Appuyez sur LOCK/CLEAR sur le T-Pad du chariot pour quitter le mode de configuration.

Vérifiez le bon fonctionnement du chariot en déverrouillant et en verrouillant plusieurs fois.

Si vous rencontrez des problèmes, effectuez un étalonnage du servo. Pour effectuer au clavier, appuyez sur

1350 ENTER puis sur 1 et 5 ensemble pendant 1 seconde et relâchez-les.

Le servomoteur doit effectuer un auto-étalonnage, ce qui devrait prendre env. 30 secondes et en cas de succès, une mélodie à 3 notes sera jouée. En cas d'échec, une mélodie à 7 notes sera jouée.

METRO

Machine Translated by Google



* Conservez ce document pour une application future, une charge nominale et/ou une référence de sécurité.

© 2022 InterMetro Industries Corporation, Wilkes-Barre, PA 18705 INSTR-FIRMWARE RÉV 11/22

an Ali Group Company

