


STARSYS® CARTS WITH KEYLESS ENTRY

BASIC TOUCHPADS

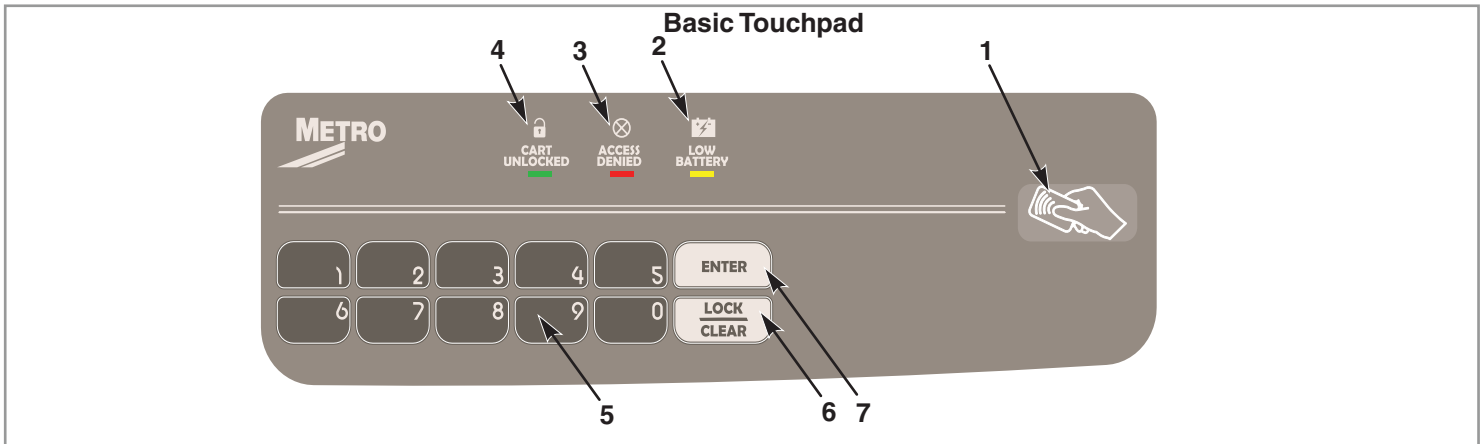

Touchpads for Basic Models:

1. Proximity Card Reader scan area (If equipped)
2. Replace battery indicator (yellow LED)
3. Access Denied indicator (red LED)
4. Unlocked Cart indicator (green LED)
5. Numeric keypad
6. "LOCK/CLEAR" button
7. "ENTER" button

Carts arrive with 2 pre-programmed codes. The following is a review of each:

- The default supervisor code is 1350. Supervisor credentials unlock the cart and can add or delete users and other supervisors.
- The default user code is 0531. User credentials can only unlock the cart.

Unlocking the Cart using the Touchpad or the Card Reader:

PIN CREDENTIAL:

1. Enter a valid PIN (between 4 - 14 digits).
2. Press "ENTER."
 - If the code is VALID, system will automatically unlock unit.
 - If the code is INVALID, system will not unlock unit (red LED indicator on keypad (callout 5) will blink 3 times and 3 beeps will be heard). Re-enter correct code.
 - If enabled, the Bad Credential Lockout mode will be triggered if a certain number of INVALID CODES are entered within a set number of minutes. If the Bad Credential Lockout mode is activated, the unit will lock out the touchpad for a set number of minutes, and no access will be granted via the touchpad until the timeout has expired. The settings for the Bad Credential Lockout are accessed via the LockView software.

CARD CREDENTIAL:

If the electronic lock is equipped with a card reader (HID Proximity or HID iCLASS, iClass SE or iClass Seos):

1. Present a valid card within range of the proximity card reader.

DUAL CREDENTIAL:

If the User or Supervisor requires a dual credential:

1. Enter a valid PIN and press "ENTER" (for touchpad credentials) or present a valid card (for HID Proximity or HID iCLASS, iClass SE or iClass Seos credentials).
2. Enter the second credential (4-14 digit PIN) and press "ENTER."

NOTE: The second credential must always be a 4 - 14 digit pin.

To Relock the Cart using the Touchpad:

1. The carts are equipped with AUTO RE-LOCK, the cart will lock automatically when the specified time elapses.
2. To re-lock before time limit expires, press LOCK/CLEAR button.

NOTE: The default AUTO RE-LOCK time is 5 minutes. AUTO RE-LOCK settings are adjustable via the LOCKVIEW software and this feature can be disabled. Consult with your supervisor if there any questions about AUTO RE-LOCK settings.

Unlocking the Cart using the Override Key Lock:

1. Insert the key into the mechanical key lock and turn clockwise.
2. To open, pull out drawer to access.

To Relock the Cart using the Override Key Lock:

1. To close, push in drawer.
2. Turn the key in a counter-clockwise direction.



Strongly recommended to use either Duracell® or Rayovac® batteries. Please DO NOT use Energizer® Max due to an incompatibility with this application.

* Save this document for future application, load rating and/or safety reference.

© 2020 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
L07-159 REV B 06/20



We put space to work.®

an Ali Group Company



The Spirit of Excellence