


LIONVILLE® CARTS WITH KEYLESS ENTRY TOUCHPADS-BASIC/ADVANCED/WIRELESS

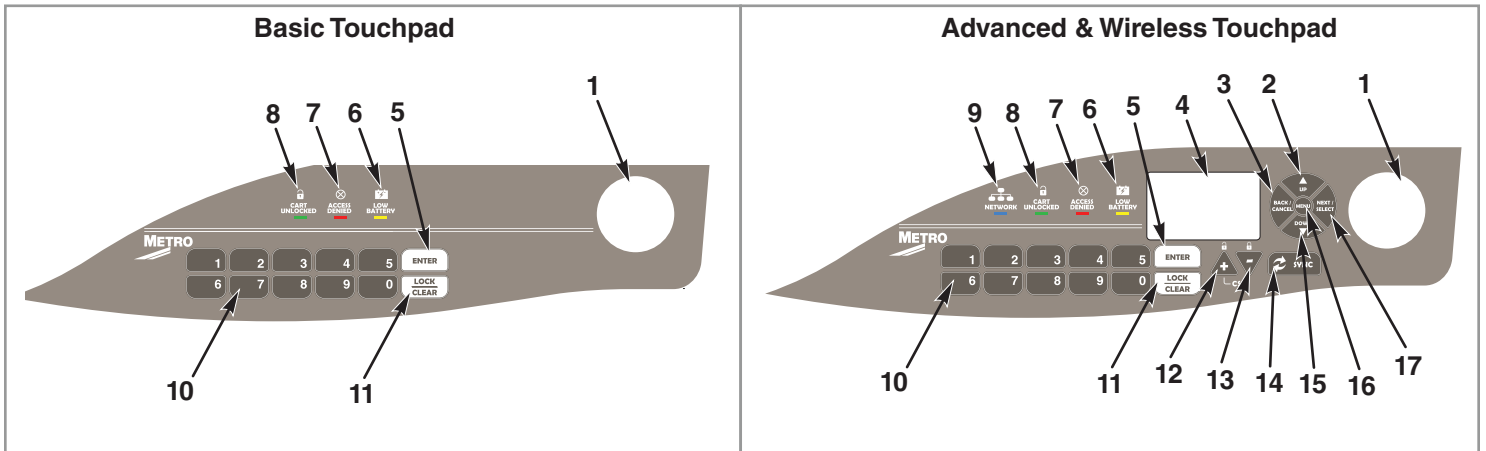

Touchpads for Basic, Advanced and Wireless Models:

- | | | |
|---------------------------------------|--|--------------------------|
| 1. Override Lock | 7. Access Denied indicator (red LED) | 13. "-" button |
| 2. "UP" button | 8. Unlocked Cart indicator (green LED) | 14. "SYNC" button |
| 3. "BACK/CANCEL" button | 9. Network activity indicator (blue LED) | 15. "DOWN" button |
| 4. Dot matrix LCD | 10. Numeric keypad | 16. "Menu" button |
| 5. "ENTER" button | 11. "LOCK/CLEAR" button | 17. "NEXT/SELECT" button |
| 6. Low battery indicator (yellow LED) | 12. "+" button | |

Carts arrive with 2 pre-programmed codes. The following is a review of each:

- The default supervisor code is **1350**. Supervisor credentials unlock the cart and can add or delete users and other supervisors.
- The default user code is **0531**. User credentials can only unlock the cart.

Unlocking the Cart using the Touchpad or the Card Reader:

PIN CREDENTIAL:

1. Enter a valid PIN (between 4 - 14 digits).
2. Press "ENTER."
 - If the code is VALID, system will automatically unlock unit.
 - If the code is INVALID, system will not unlock unit (red LED indicator on keypad (callout 6) will blink 3 times and 3 beeps will be heard). Re-enter correct code.
 - If enabled, the Access Denied mode will be triggered if a certain number of INVALID CODES are entered within a set number of minutes. If the Access Denied mode is activated, the unit will lock out the touchpad for a set number of minutes, and no access will be granted via the touchpad until the timeout has expired. A valid card credential will still be accepted. The settings for the Access Denied are accessed via the LockView software.

CARD CREDENTIAL:

If the electronic lock is equipped with a card reader (HID Proximity or HID iCLASS, iClass SE or iClass Seos):

1. Present a valid card within range of the proximity card reader.

DUAL CREDENTIAL:

If the User or Supervisor requires a dual credential:

1. Enter a valid PIN and press "ENTER" (for touchpad credentials) or present a valid card (for HID Proximity or HID iCLASS, iClass SE or iClass Seos credentials).
2. Enter the second credential (4-14 digit PIN) and press "ENTER."

NOTE: The second credential must always be a 4 - 14 digit pin.

To Relock the Cart using the Touchpad:

1. The carts are equipped with AUTO RE-LOCK, the cart will lock automatically when the specified time elapses.
2. To re-lock before time limit expires, press LOCK/CLEAR button.

Auto Re-Lock:

1. The default AUTO RE-LOCK time is 5 minutes. AUTO RE-LOCK settings are adjustable via the LOCKVIEW software and this feature can be disabled. Consult with your supervisor if there are any questions about AUTO RE-LOCK settings.
2. Advanced & Wireless models are equipped with a motion sensor that will reset the AUTO RE-LOCK timer when activated. The LCD display will flash when motion sensor is activated.

Unlocking the Cart using the Override Key Lock:

1. Insert the key into the mechanical key lock and turn clockwise.
2. To open, pull out drawer to access.

To Relock the Cart using the Override Key Lock:

1. To close, push in drawer.
2. Turn the key in a counter-clockwise direction.

To Access Narcotics Drawers (Advanced & Wireless):

1. Every user that wishes to access the narcotics drawers must be a dual credential user in LockView.
2. The primary credential will be used to gain access to the main lock. (Default CS Access Code is 7777).
3. Once the main lock is open, pressing "+" button will allow for access to narcotic drawers(s) by first entering a primary credential (Default Code 7777 or proximity card) followed by a dual credential PIN (Dual credential PIN is 1234).
4. Once the proper dual code is entered for the user -- the narc drawers that the user has access to in LockView will unlock.
5. Pressing "-" button will lock the narcotics drawers.
6. Pressing the clear button will lock both locks.



Strongly recommended to use either Duracell® or Rayovac® batteries. Please DO NOT use Energizer® Max due to an incompatibility with this application.

* Save this document for future application, load rating and/or safety reference.

© 2019 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
L07-158 REV C 06/20



We put space to work.

an Ali Group Company



The Spirit of Excellence