


INSTRUCTIONS FOR USE

Hi-Rise Shelving System

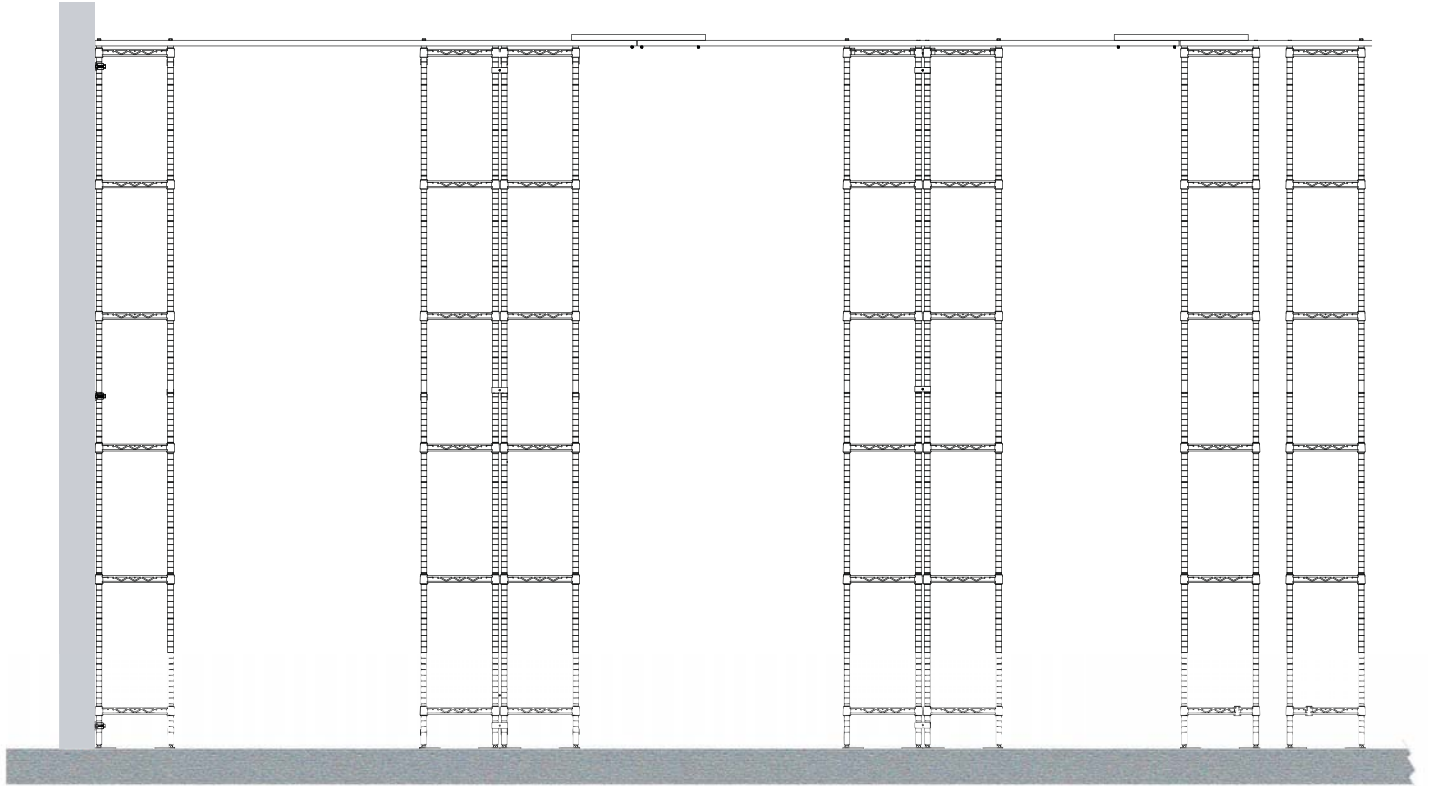

InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA USA 18705
For Product Information Call: **1-800-992-1776**
Visit Our Web Site: **www.metro.com**




**INSTRUCTIONS
FOR USE**
*High Rise
Shelving System*

Hi-Rise Shelving System

INSTRUCTIONS FOR USE


Single Wall Unit (4 - Post Construction)
Two People Required to Assemble Unit.

Note: Shelving units mounted against wall may be double back-to-back units or single units. Shelving units which will not be against a wall may only be of the double back-to-back type.

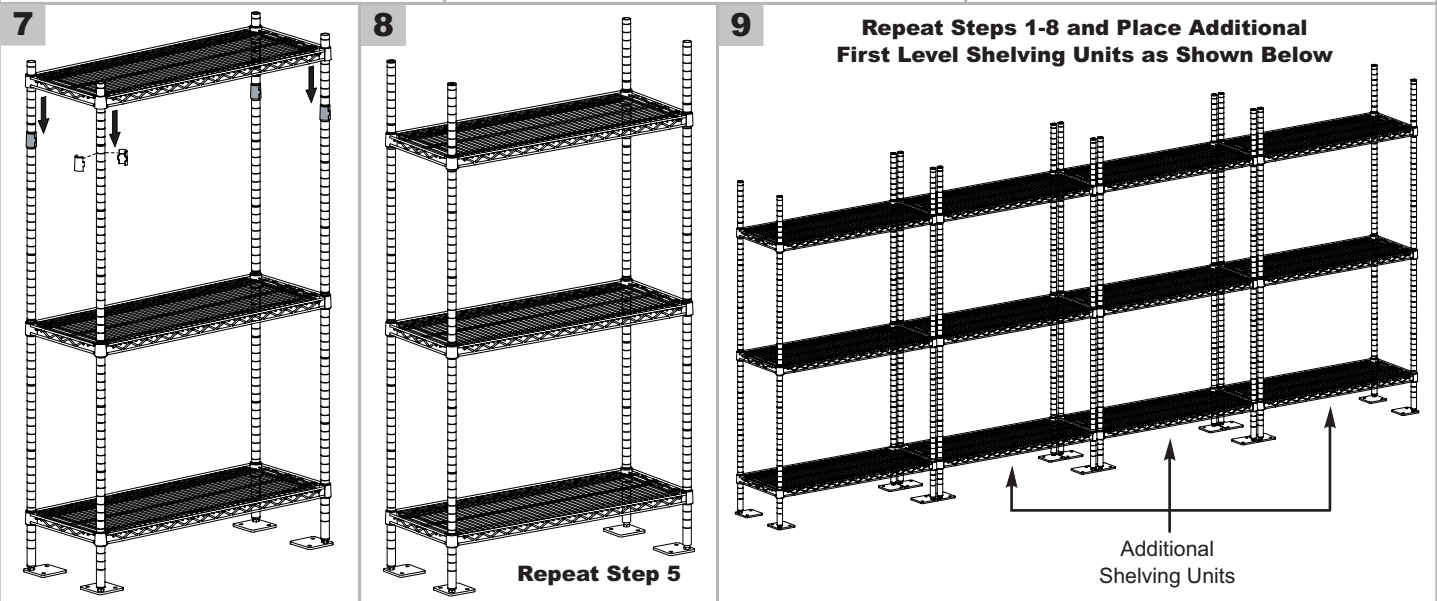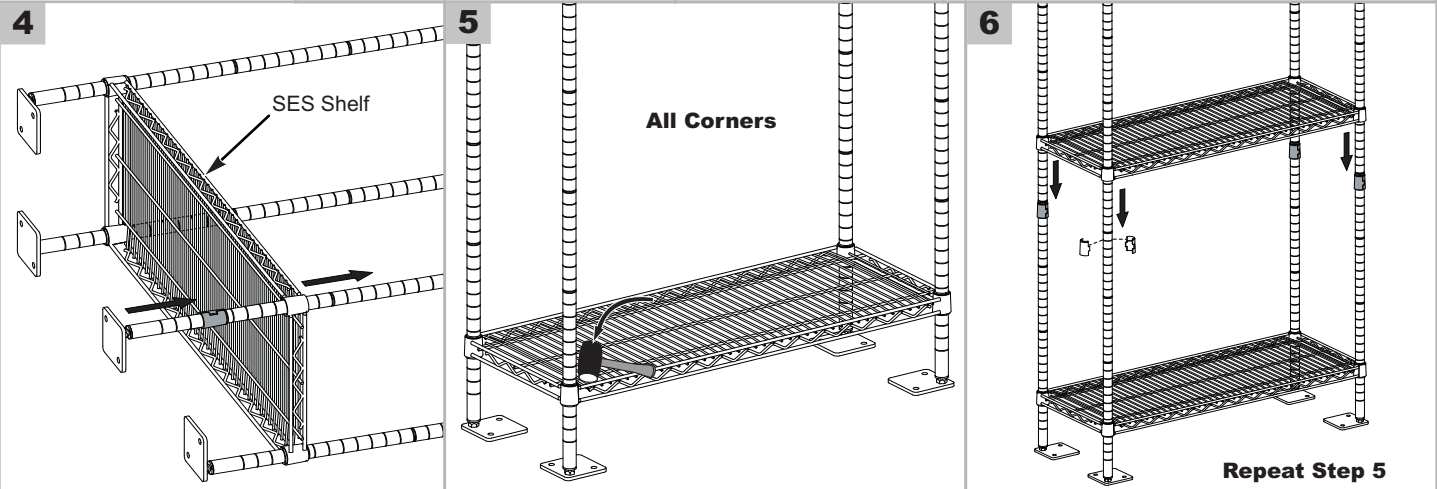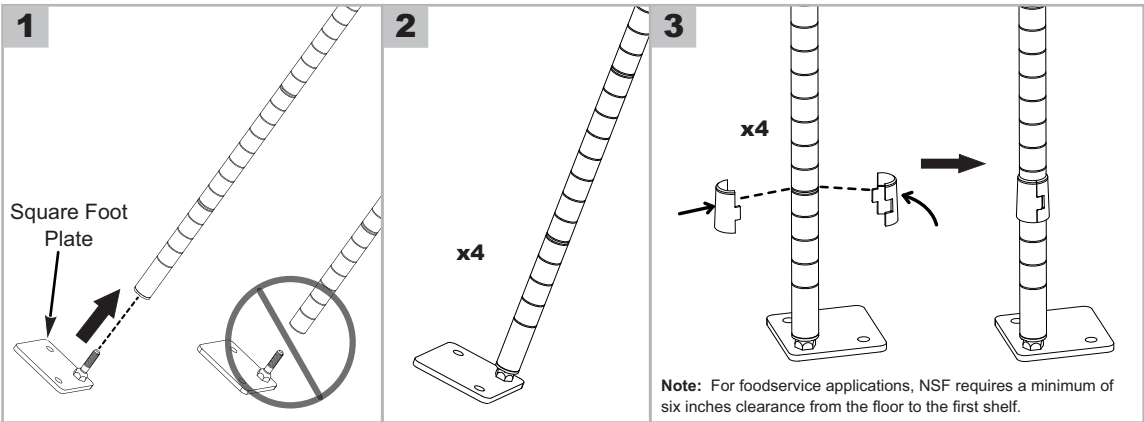

10






FRONT VIEW

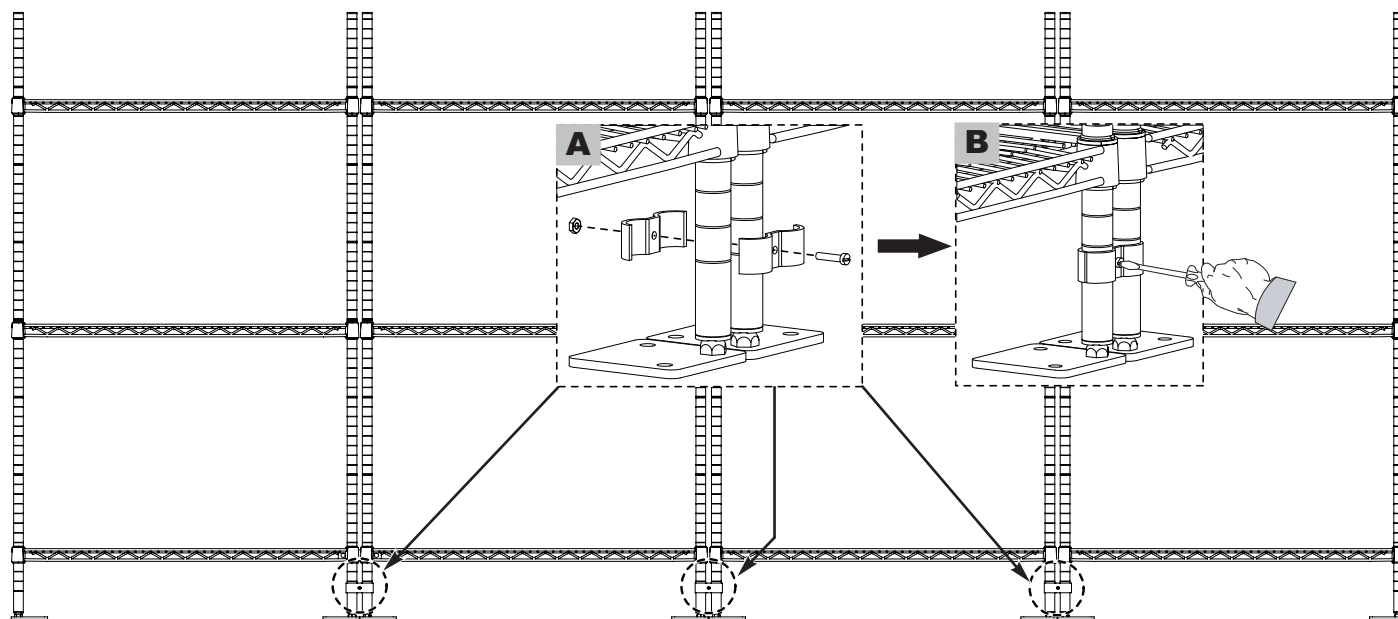


POST CLAMP LOCATIONS


11

FRONT VIEW

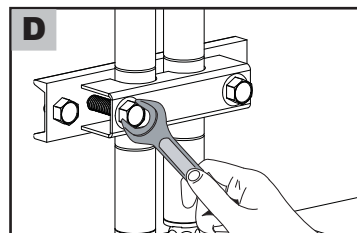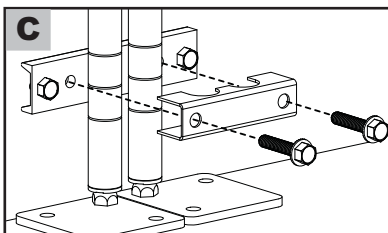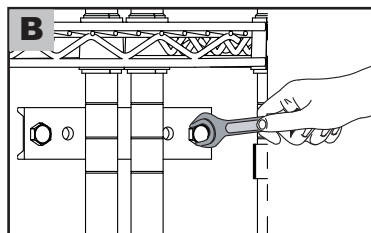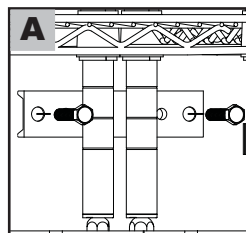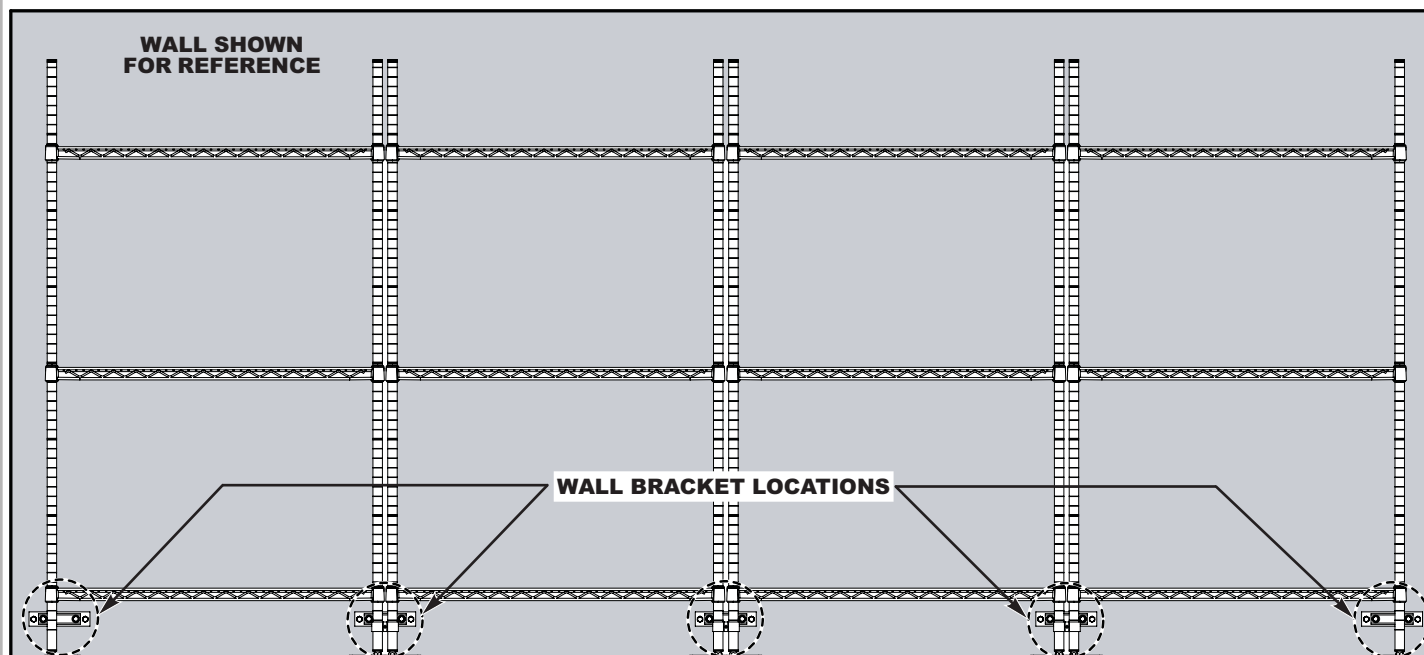



NOTE:
All units must have post protection at floor level. Floor bumpers must be installed to prevent any contact between the shelving units and various material handling trucks.

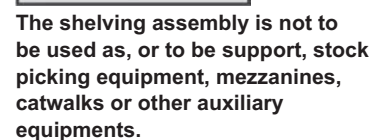

4

INSTRUCTIONS FOR USE

Double Unit (4 - Post Construction)

Two People Required to Assemble Unit.

1


Follow Steps 1-9 of Page2 for
Assembly Procedure of
Shelving Cart and First Level
Shelving Units

2

Follow Steps 12-16 of Page4
for Assembly Procedure of
Installing Shelves at
Required Positions on First
Level Shelving Units



3

PLACE SINGLE UNITS BACK TO BACK



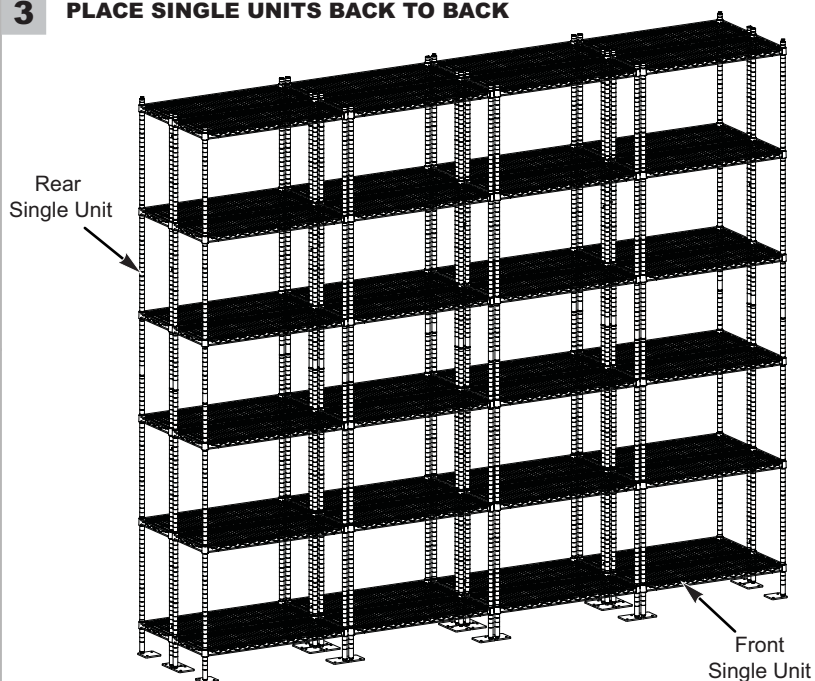


4

**Perimeter Posts -
Clamping**

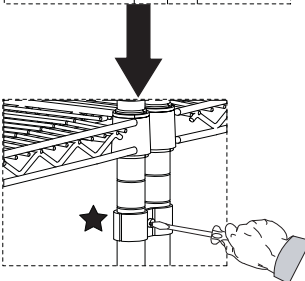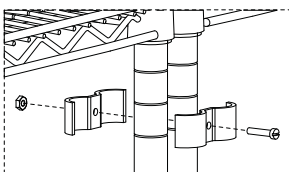

**Interior Posts -
Clamping**

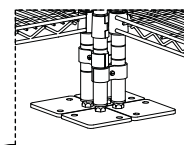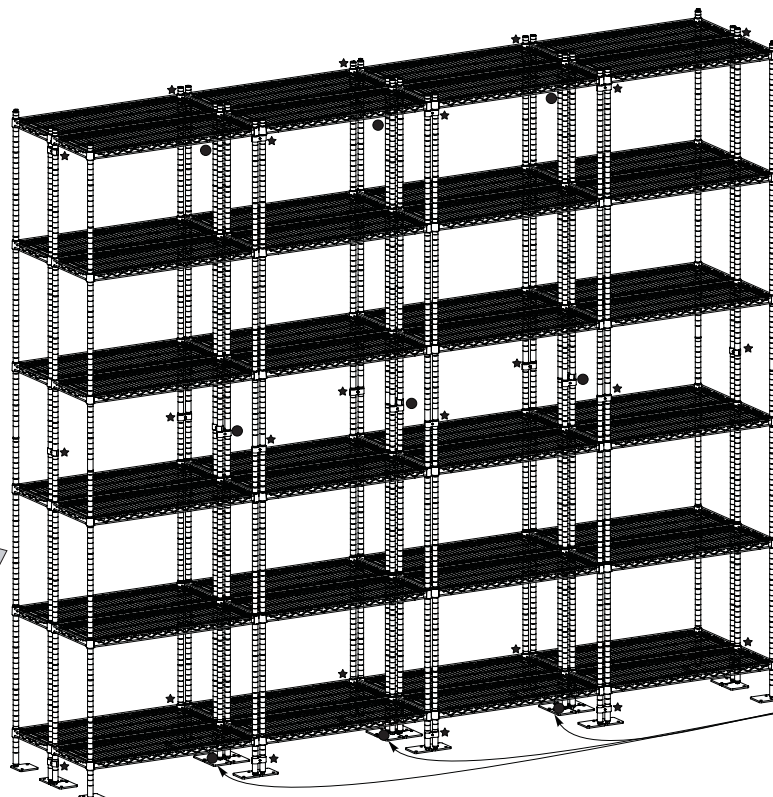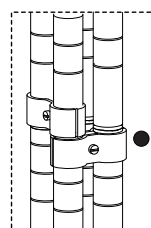

**Mounting Holes of
Foot Plates Must
Face Inside**

Hi-Rise Shelving System

5

PLACE SINGLE AND DOUBLE UNITS - FRONT VIEW

Wall Shown for Reference

Load Rating Plate (Typ)

Single Wall Unit

Double Unit

Double Unit

6

8' Cross Bar

Splice Bar

7

Cross Bar

Single Wall Unit

Double Unit

9

NOTE:

- 1) Do not allow drill bit to penetrate the post foot and damage the internal threads of the foot.
- 2) Cross bars need not be bolted to interior posts.

7/16" Drill Bit

Interior Posts

8

8


10

10


11

11

12

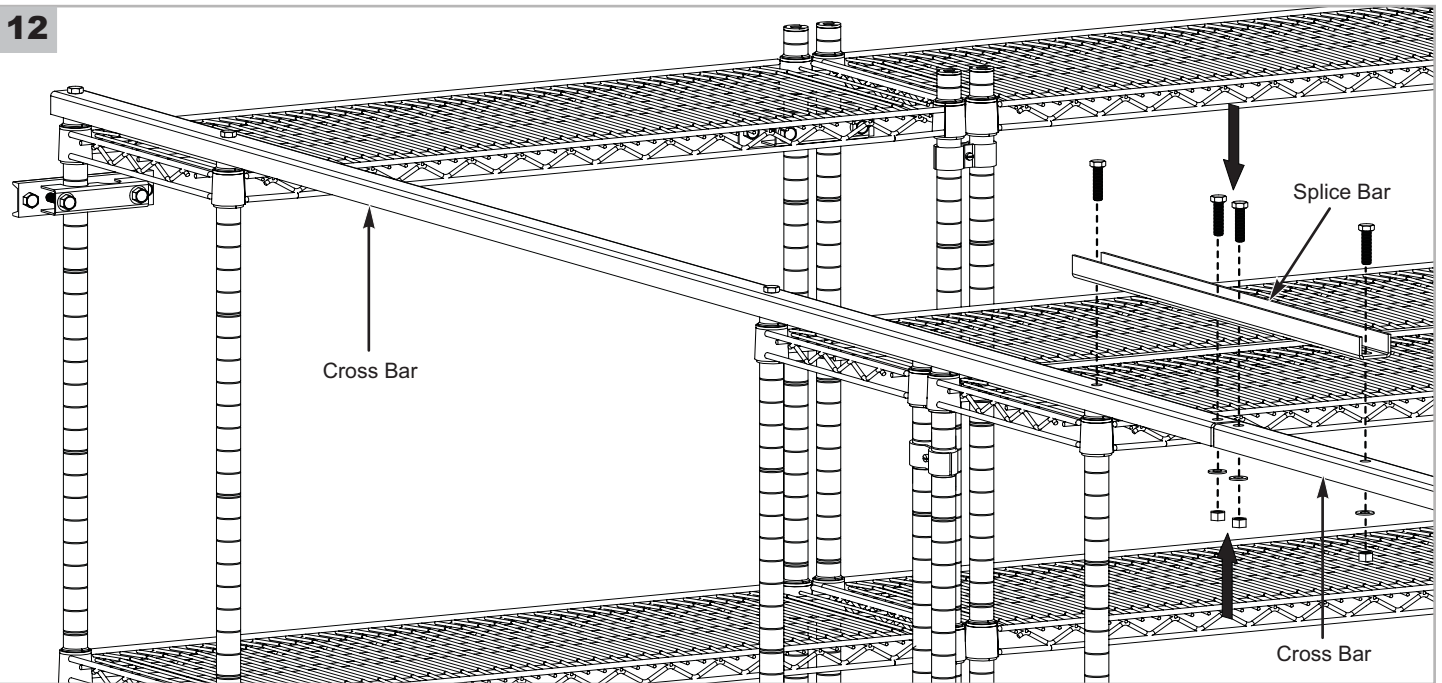

13

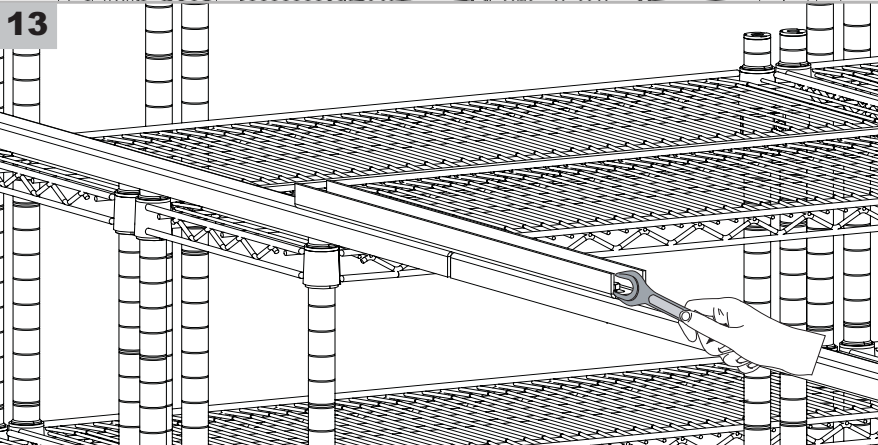

NOTE:


- 1) When splice kit bolts do not match a post top, use hex head bolts, lock washer and nut. Four bolts are required per splice bar.
- 2) Floor bumpers must be installed to prevent and contact between the shelving units and various material handling trucks.

CAUTION

The shelving system as well as the cross bars should not be subjected to any additional load such as cross walks, conduit, etc.

14


**TOP VIEW -
LOCATION OF CROSS &
SPICE BARS**

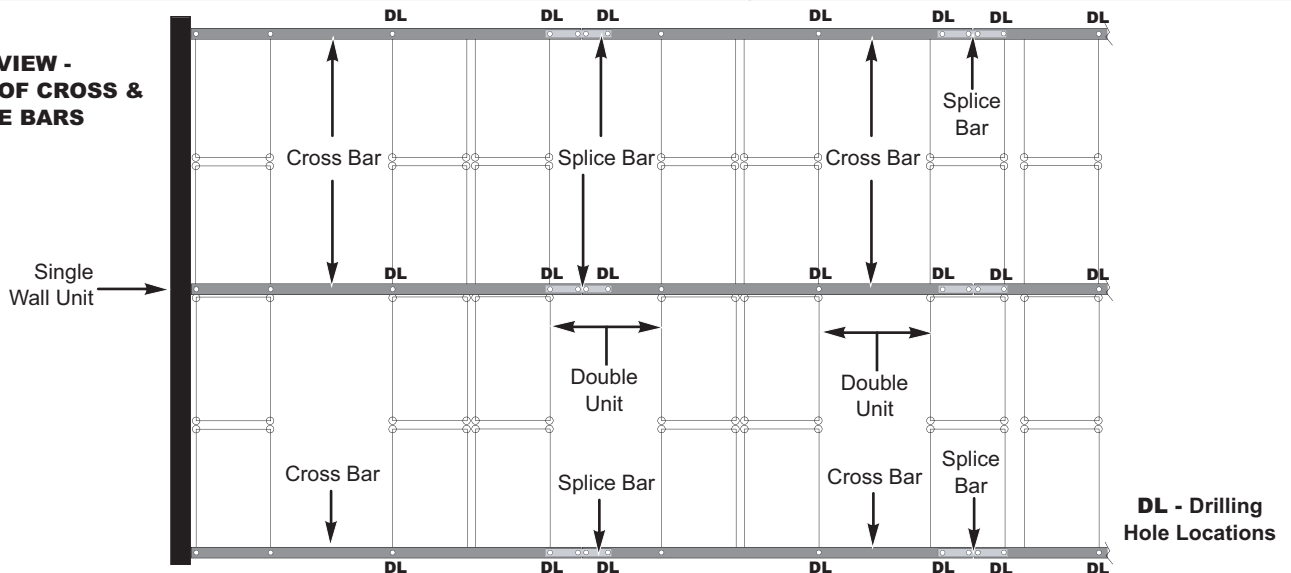

Hi-Rise Shelving System

INSTRUCTIONS FOR USE

Single Wall Unit and Double Unit (S-Hook)
Two People Required to Assemble Unit.

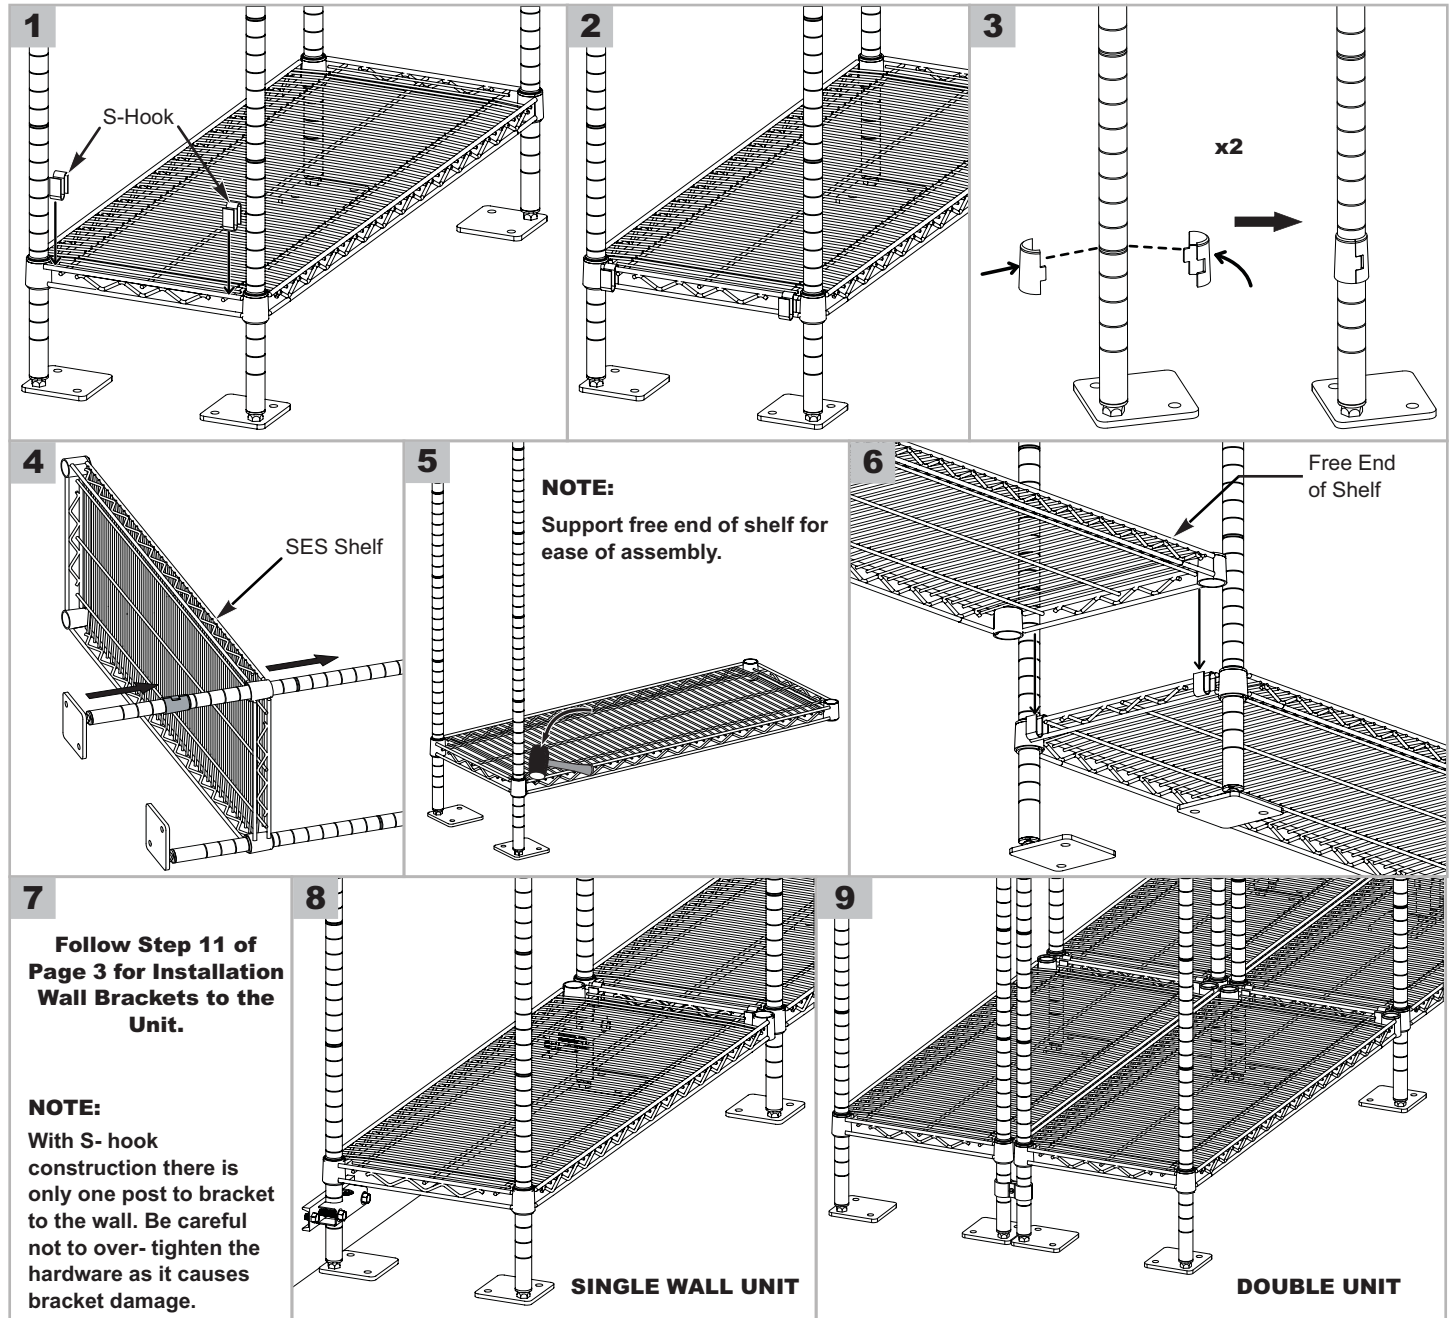

REFER TO PAGES 2-7 FOR INSTRUCTIONS TO ASSEMBLE SINGLE AND DOUBLE UNITS WITH FIRST AND SECOND LEVEL SHELVING UNITS.

* Save this document for future application, load rating and/or safety reference.



InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA USA 18705
For Product Information Call: 1-800-992-1776
Visit Our Web Site: www.metro.com

L01-098 Rev. A
04/2014

Information and specifications are subject to change without notice. Please confirm at time of order.