Machine Translated by Google

M800 W/ FRONT PULL OUT TRAY CS DRAWER INSTALLATION

1. *Installation of Keyless CS (Narcotics) drawer below a front pull out tray.*
   a. *Remove storage drawers from the medication cart.*
   b. *Open PC Board cover panel on right side inner wall.*

   c. *Remove the J1 battery connection from the PC Board.*

2. *Mount CS servo / bracket to right rear wall of med cart.*
   a. *Screw CS servo bracket 2nd slide position to upper set of 3 holes for a one tier drawer or the lower set of 3 holes for 2 tier storage drawer from the top right side back wall.*

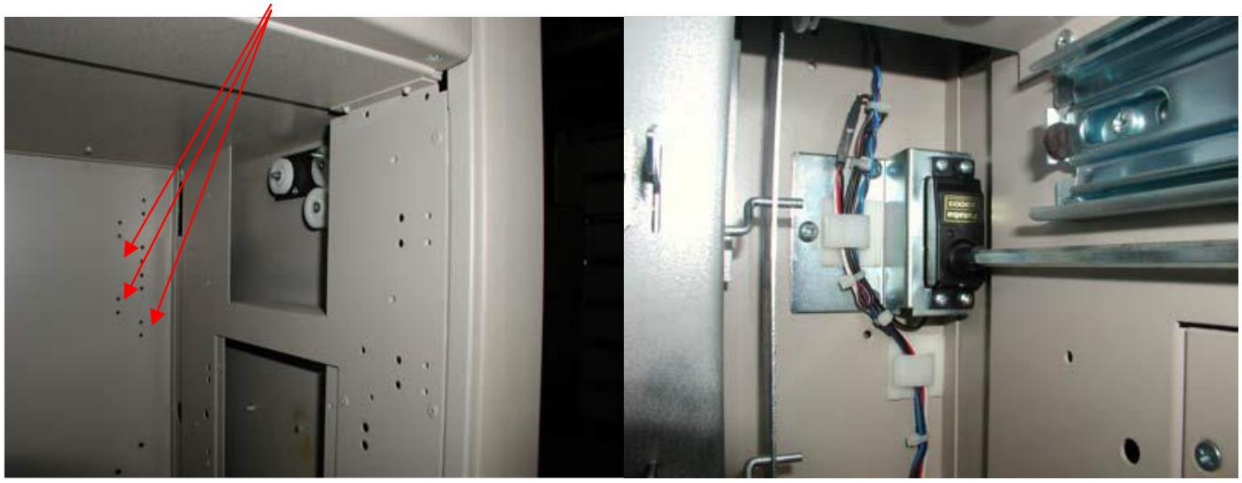

Machine Translated by Google

3. Install drawer sense switch.

a. Mount drawer sense switch onto the left side of the center rail. b. Locate switch for the 1 tier CS drawer on 2nd set of holes. c. For the two tier storage drawer this switch is located in the 3rd set of holes from the top.

d. Connect blue and violet wire from CS (narcotics) drawer harness #34018 to drawer sense switch and servo connecter to servo motor.

e. Dress extra wire against back wall secure with small clamps. f. Install plastic grommets on to holes if required. g. Route narc harness thru opening in right side inner wall.

h. Connect Narc harness to CS-2 connection J-6 on main pc board. (See board drawing last page)

Machine Translated by Google

4. Assemble actuator, spring, onto one end of servo hex rod and spline coupling on to the other end. (See Drawing last page)

a. Place the spline coupling end of the servo hex rod onto the servo and manually rotate the servo to the right.

b. Replace the battery J1 connection on the PC Board.

c. Remove the Servo hex rod and replace it so that the actuator end of the rod has the flat side facing toward the drawer.

d. Place the Actuator end of the narc rod into the striker block and fasten to the right side wall with #6 x 3/8 pan head screw.

Note: Parts shown in this photo are mounted in the top slide position

Striker block is mounted in the lower position for 2 tier drawer

5. Install security panel above CS drawer.

a. Mark and drill #29 hole on security shelf on the right front 1 5/16 in front of existing hole for chassis clearance.

b. Place security panel above slide, mark holes and drill #35 just above marked hole.

c. Secure panel with #6 sheet metal screws.

Machine Translated by Google

6. Install new CS drawer onto slide.

a. Check narc drawer lock for proper manual key operation.

7. Activate Keyless narcotics drawer function.

a. Enter service code that has been assigned to cart or 911 Press ok.

b. Press function key to configure Narcotic drawer.

c. Press OK to change.

d. Enter a number for each Narcotic drawer to be enabled. (1,2,3) Press ok then sign out.

e. Sign in with a valid manager ID. Press function key until Assign CS ID is displayed.

f. Follow display commands and enter a three digit CS ID.

g. Add CS drawer pin #. Enter the pin # again to verify. Then Press sign out to lock cart.

h. Test Drawer function with keyless entry.

Machine Translated by Google

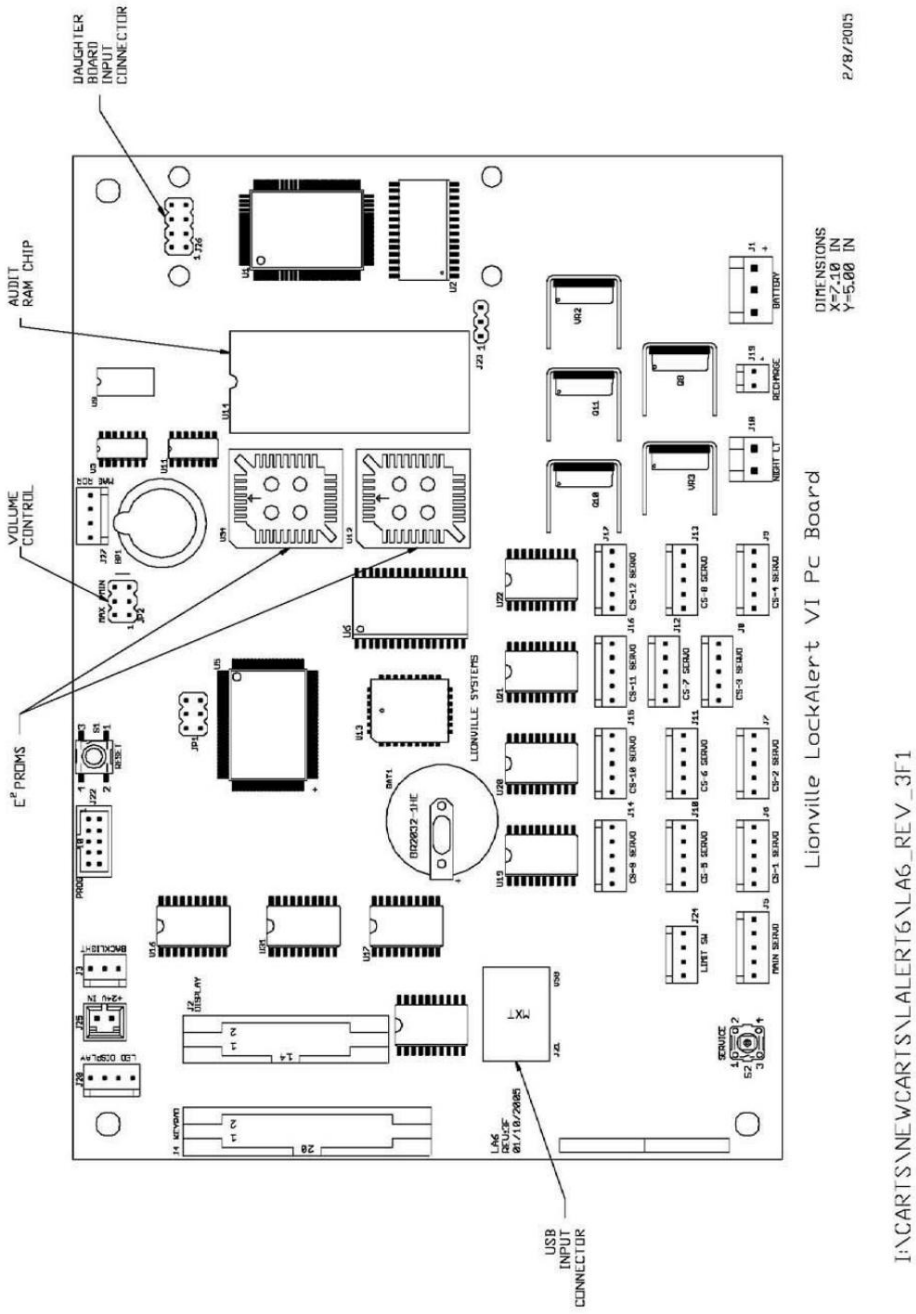

Machine Translated by Google

CS (Narc Drawer Lock assy)

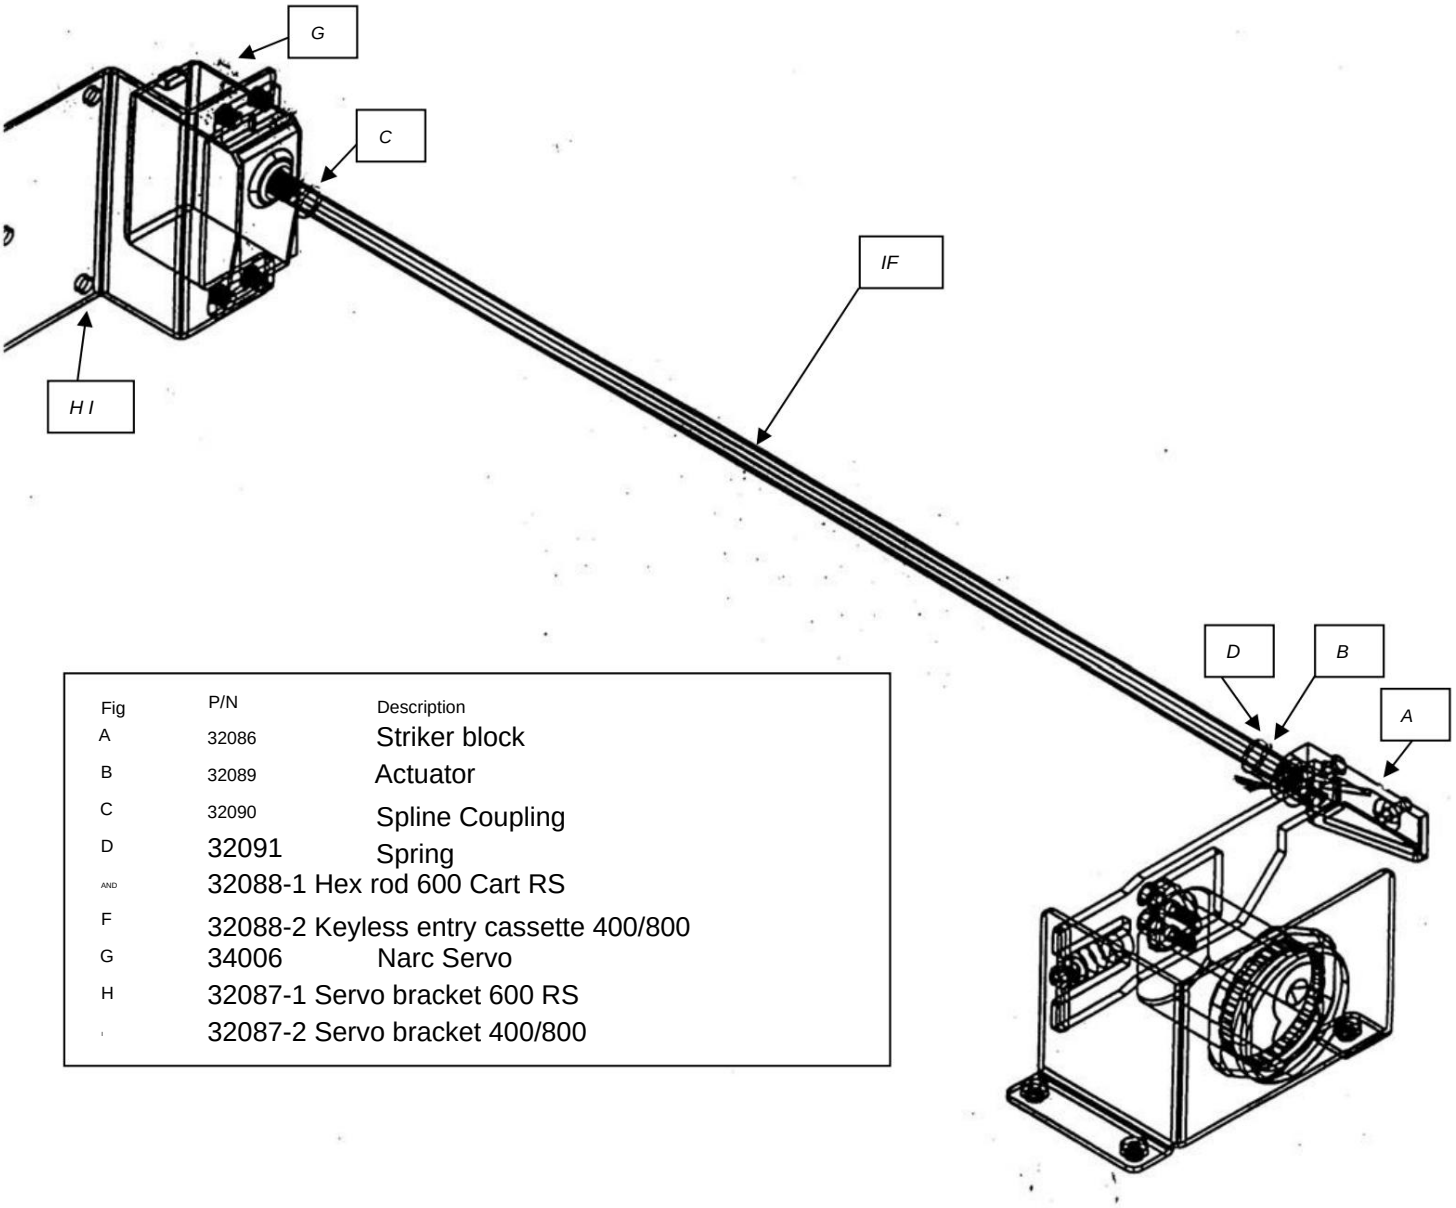

Fig	P/N	Description
A	32086	Striker block
B	32089	Actuator
C	32090	Spline Coupling
D	32091	Spring
AND	32088-1	Hex rod 600 Cart RS
F	32088-2	Keyless entry cassette 400/800
G	34006	Narc Servo
H	32087-1	Servo bracket 600 RS
'	32087-2	Servo bracket 400/800

METRO®

We put space to work.

© 2023 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
INSTR-LA6CSDRWRINSTL REV 06/23

an Ali Group Company

GROUP

The Spirit of Excellence

Machine Translated by Google

M800 W/ FRONT PULL OUT TRAY CS DRAWER INSTALLATION

1. Installation du tiroir Keyless CS (narcotiques) sous un plateau coulissant avant.

   un. Retirez les tiroirs de rangement du chariot à médicaments.

   b. Ouvrez le panneau de couverture de la carte PC sur la paroi intérieure droite.

   c. Retirez la connexion de la batterie J1 de la carte électronique.

2. Montez le servo/support CS sur la paroi arrière droite du chariot médical.

   un. Vissez le support de servo CS 2 ème position coulissante sur l'ensemble supérieur de 3 trous pour un tiroir à un niveau ou sur l'ensemble inférieur de 3 trous pour un tiroir de rangement à 2 niveaux à partir de la paroi arrière supérieure droite.

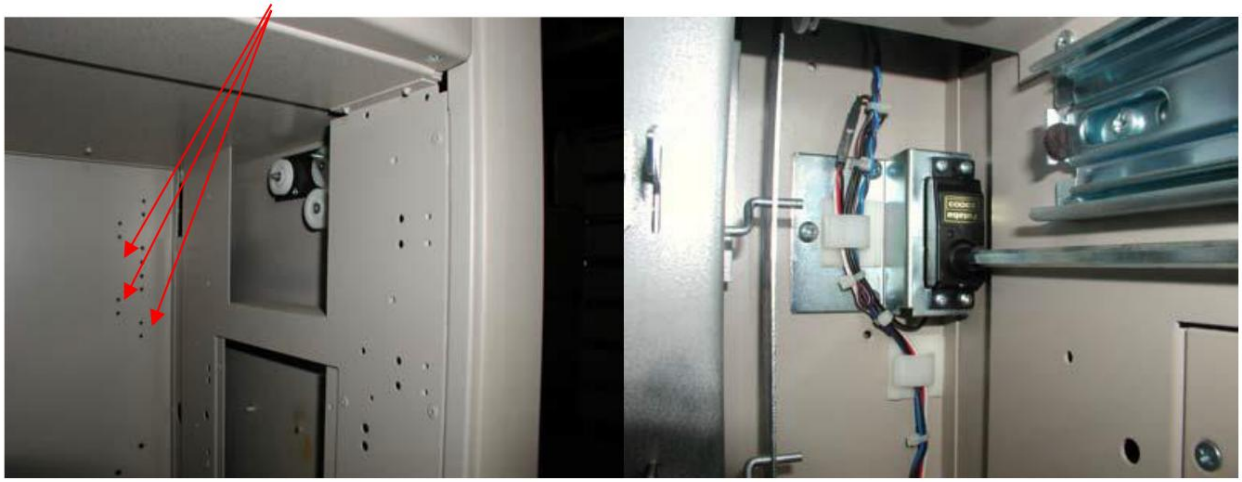

Machine Translated by Google

3. Installez le commutateur de détection du tiroir.

un. Montez le commutateur de détection du tiroir sur le côté gauche du rail central.

b. Localisez l'interrupteur du tiroir CS à 1 niveau sur le 2ème jeu de trous. c. Pour le

tiroir de rangement à deux niveaux, cet interrupteur est situé dans la troisième série de trous à partir du haut.

d. Connectez le fil bleu et violet du faisceau de tiroir CS (narcotiques) n° 34018 au commutateur de détection du tiroir et au connecteur du servomoteur au servomoteur.

e. Placez le fil supplémentaire contre le mur arrière et fixez-le avec de petites pinces. F.

Installez des œillets en plastique sur les trous si nécessaire. g.

Acheminez le harnais Narc à travers l'ouverture de la paroi intérieure droite.

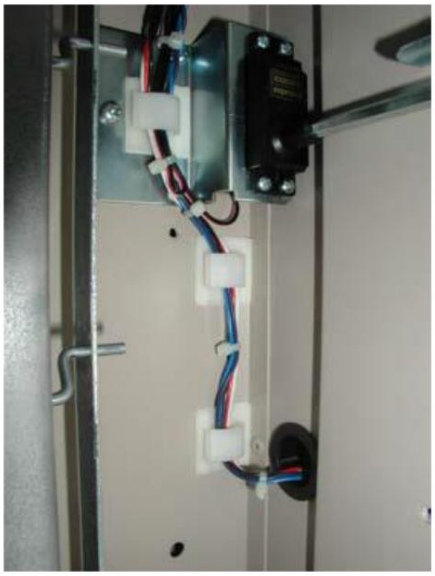

h. Connectez le faisceau Narc à la connexion CS-2 J-6 sur la carte électronique principale. (Voir le dessin du tableau en dernier page)

Machine Translated by Google

4. Assemblez l'actionneur, le ressort, sur une extrémité de la tige hexagonale du servo et de l'accouplement cannelé.
à l'autre bout. (Voir Dessin dernière page)

un. Placez l'extrémité d'accouplement cannelée de la tige hexagonale du servo sur le servo et faites tourner manuellement le servo vers la droite.

b. Remplacez la connexion J1 de la batterie sur la carte électronique.

c. Retirez la tige hexagonale du servo et remplacez-la de sorte que l'extrémité de l'actionneur de la tige ait le plat côté orienté vers le tiroir.

d. Placez l'extrémité de l'actionneur de la tige narc dans le bloc de frappe et fixez-la sur le côté droit. mur avec une vis à tête cylindrique n° 6 x 3/8.

Remarque : pièces montré dans ce les photos sont monté dans le position supérieure du coulisseau

Le bloc de frappe est monté dans le position inférieure pour tiroir à 2 niveaux

5. Installez le panneau de sécurité au-dessus du tiroir CS.

un. Marquez et percez le trou n° 29 sur la tablette de sécurité sur le devant droit 1 5/16 devant le trou existant pour dégagement du châssis.

b. Placez le panneau de sécurité au-dessus de la glissière, marquez les trous et percez le numéro 35 juste au-dessus du trou marqué.

c. Fixez le panneau avec des vis à tôle n° 6.

Machine Translated by Google

6. Installez le nouveau tiroir CS sur la glissière.

   un. Vérifiez le verrouillage du tiroir Narc pour le bon fonctionnement manuel de la clé.

7. Activez la fonction de tiroir à stupéfiants sans clé.

   un. Entrez le code de service qui a été attribué au panier ou 911 Appuyez sur ok.

   b. Appuyez sur la touche de fonction pour configurer le tiroir à stupéfiants.

   c. Appuyez sur OK pour modifier.

   d. Entrez un numéro pour chaque tiroir de stupéfiants à activer. (1,2,3) Appuyez sur ok puis déconnectez-vous.

   e. Connectez-vous avec un identifiant de responsable valide. Appuyez sur la touche de fonction jusqu'à ce que Attribuer un ID CS s'affiche.

   F. Suivez les commandes d'affichage et entrez un ID CS à trois chiffres.

   g. Ajoutez le numéro de broche du tiroir CS. Entrez à nouveau le code PIN pour vérifier. Appuyez ensuite sur Déconnexion pour verrouiller le panier.

   h. Fonction du tiroir de test avec entrée sans clé.

Machine Translated by Google

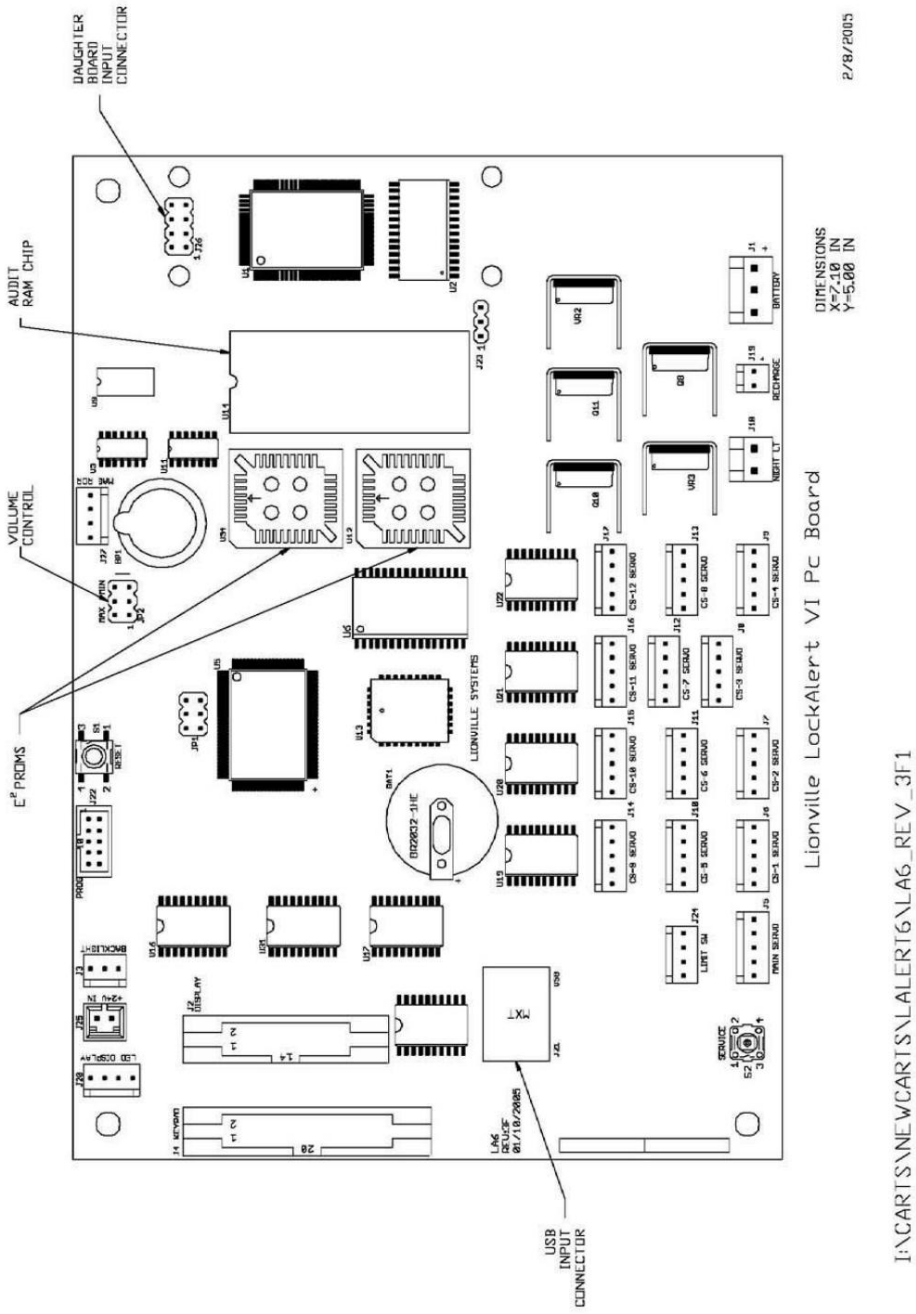

Machine Translated by Google

CS (ensemble de verrouillage de tiroir Narc)

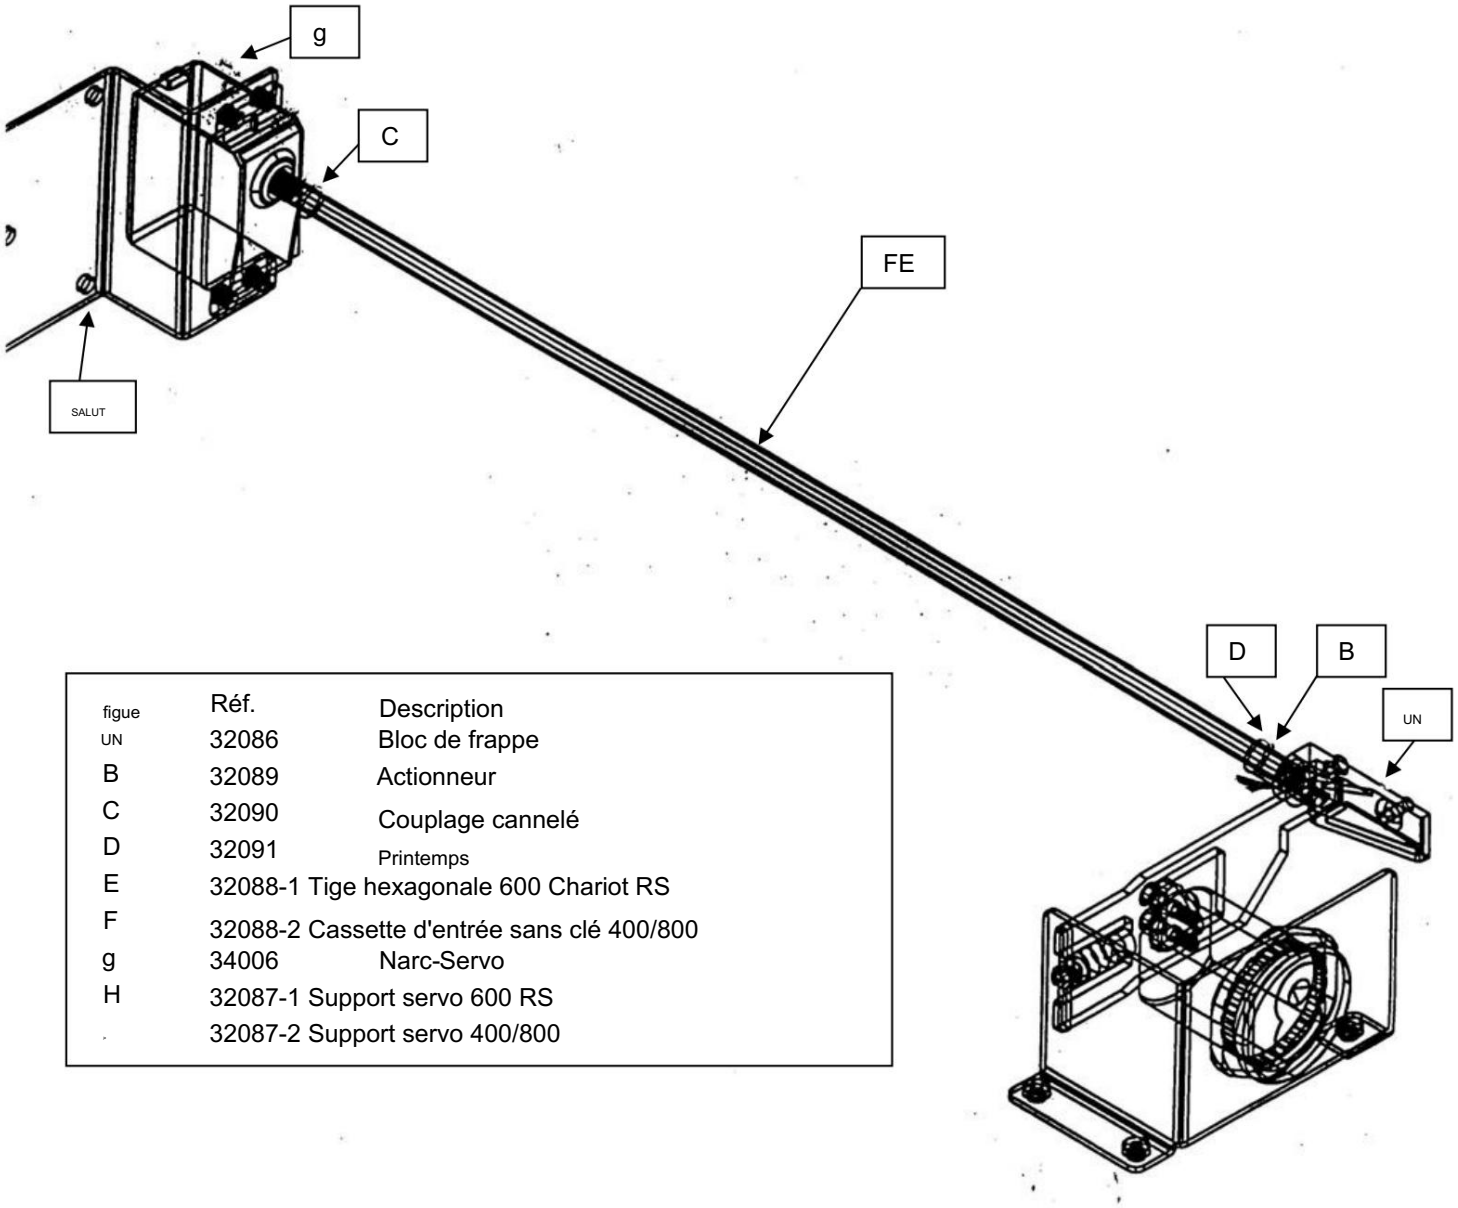

figue	Réf.	Description
UN	32086	Bloc de frappe
B	32089	Actionneur
C	32090	Couplage cannelé
D	32091	Printemps
E	32088-1	Tige hexagonale 600 Chariot RS
F	32088-2	Cassette d'entrée sans clé 400/800
g	34006	Narc-Servo
H	32087-1	Support servo 600 RS
.	32087-2	Support servo 400/800

METRO®
We put space to work.

© 2023 InterMetro Industries Corporation, Wilkes-Barre, PA 18705

an Ali Group Company
GROUP
The Spirit of Excellence