Medication Cart Keypad Replacement

STEP 1 – Removal of Cart Top

a. *Remove the rivets from the cart top by punching the center pin of the rivet through into the cart. Then pull the rivet from the cart by inserting the punch into the rivet and prying it out.*

b. *Lift up on the left front portion of the top first followed by the left rear then the right rear, leaving the right front corner at the key lock last.*

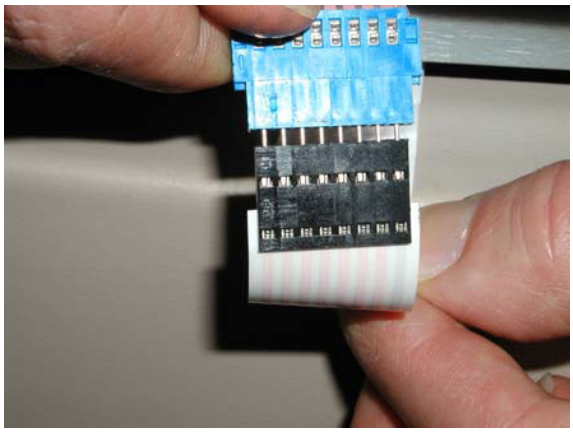

c. *There is double sided tape holding the top to the cart so some prying up is necessary to free the top at each corner.*

d. *Carefully lift the cart top and remove the connecting ribbon for the keypad.*

e. *Carefully peel the old keypad from the cart top.*

f. *Clean any sticky residue from the old keypad.*

g. *Peel the backing from the new keypad.*

h. *Feed the keypad connecter thru the slot.*

i. *Carefully align the keypad before pressing in place.*

j. *Do not bend the keypad during installation.*

k. *Reconnect keypad connecter to ribbon cable.*

l. *Replace cart top and install replacement plastic rivets.*

We put space to work.

© 2023 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
INSTR-KEYPADREP REV 01/23

Machine Translated by Google

MODE D'EMPLOI

Remplacement du clavier du chariot à médicaments

ÉTAPE 1 – Retrait du dessus du chariot

un. Retirez les rivets du dessus du chariot en enfonçant la goupille centrale du rivet dans le chariot. Retirez ensuite le rivet du chariot en insérant le poinçon dans le rivet et en le faisant levier.

b. Soulevez d'abord la partie avant gauche du haut, suivie de l'arrière gauche puis de l'arrière droit, en laissant le coin avant droit au niveau de la serrure à clé en dernier.

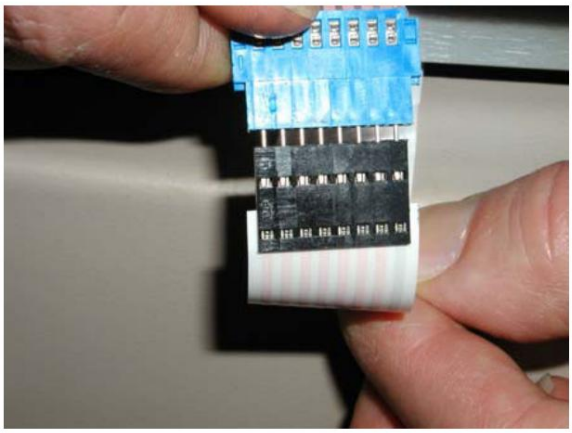

c. Il y a du ruban adhésif double face qui maintient le dessus au chariot, il est donc nécessaire de faire levier pour libérer le dessus à chaque coin.

d. Soulevez délicatement le dessus du chariot et retirez le ruban de connexion du clavier.

Machine Translated by Google

e. Décollez soigneusement l'ancien clavier du haut du chariot.

F. Nettoyez tout résidu collant de l'ancien clavier.

g. Décollez le support du nouveau clavier.

h. Faites passer le connecteur du clavier à travers la fente.

je. Alignez soigneusement le clavier avant de le mettre en place.

J. Ne pliez pas le clavier pendant l'installation.

k. Rebranchez le connecteur du clavier au câble ruban.

l. Remplacez le dessus du chariot et installez des rivets en plastique de remplacement.

We put space to work.

© 2023 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
INSTR-CLAVIERREP REV 01/23